



 










 














Fuses and Relays

PASSENGER COMPARTMENT RELAY AND FUSE BOX (260)

  location












This fuse box is located in the passenger compartment on the driver's side.

 Table of fuses







 

 







| | | | | | | | | | | | | | |
|--|--|--|---|---|--|--|--|---|--|--|--|--|--|
|  20 A |  15 A |  10 A |  7,5 A |  7,5 A |  30 A |  15 A |  20 A |  15 A |  30 A |  10 A |  30 A |  30 A |  30 A |
|  30 A |  10 A |  15 A |  30 A |  5 A |  15 A |  10 A |  15 A |  10 A |  20 A |  5 A |  5 A |  10 A |  20 A |

SE2331

Allocation of fuses (according to equipment level)

| No. | Symbol | Amps | Connection | Description |
|-----|---|------|------------|---|
| F1 |  | 20A | 11A | Main beam headlight - Instrument panel |
| F2 |  | 15A | CPG | Instrument panel - Left-hand headlight |
| F3 |  | 10A | 9P | Rear fog lights - Instrument panel |
| F4 |  | 7.5A | LPG | Left-hand headlight - Left-hand rear light - License plate light - First row cigarette lighter - Cruise control / speed limiter control - Air conditioning control unit - Tailgate lights - Lighting dimmer - Electronic stability button - Central communications unit - Automatic parking brake handle - Headlight adjustment control - Front courtesy light - Instrument panel - Instrument panel lights, Glovebox - Parking proximity switch - Radio - Rear door ashtrays |
| F5 |  | 7.5A | 63M 63L | Right-hand headlight - Right rear light |
| F6 |  | 30A | BP47 | Caravan socket |
| F7 |  | 15A | BPA4 | Horn control |
| F8 |  | 20A | (internal) | Door, luggage compartment, floor, footwell and roof lights - Electric folding mirrors |
| F9 |  | 15A | (internal) | Direction indicator and hazard light supply - Side light control |
| F10 |  | 30A | BP48 | Driver's electric window motor - Driver's door central multiplex unit |
| F11 |  | 10A | BP68 | Automatic parking brake handle control unit - Keyless vehicle start stop control button - Card reader for keyless vehicle |


Fuses and Relays

| No. | Symbol | Amps | Connection | Description |
|-----|---|------|------------|--|
| F12 |  | 30A | SBP2 | Rear power window motors |
| F13 |  | 30A | SBP3 | Passenger's electric window control - Passenger door central multiplex unit |
| F14 |  | 30A | (internal) | Front and rear wiper motors relay - Front and rear footwell lights relay |
| F15 |  | 30A | 8B | Front fog lights - Instrument panel |
| F16 |  | 10A | 40P | Passenger and driver's electric heated door mirrors |
| F17 |  | 15A | CPD | Right-hand headlight |
| F18 |  | 30A | BP3 | Electric door and tailgate locking control |
| F19 |  | 5A | BPA3 | Front and rear fog light switches - Dipped headlight control - Main beam headlight control |
| F20 |  | 15A | SP7 | First row cigarette lighter – Air conditioning control relay |
| F21 |  | 10A | SP13 | Brake light switch - Heated rear screen control relay |
| F22 |  | 15A | SP4 | First row accessories socket - Second row cigarette lighter |
| F23 |  | 10A | SP2 | Video control unit – Electric window relay - Seat supply relay – Seat memory unit – Radio – Central communications unit - Rear electric window control relay |
| F24 |  | 20A | AP3 | Electric locking control – Automatic gearbox control solenoid valve - Rain / light sensor - Front wiper motor - Central alarm unit - Air conditioning control unit - Parking proximity sensor electronic control unit - Injection control unit |
| F25 |  | 5A | AP5 | ESP and anti-lock braking system control unit - Steering wheel angle sensor |
| F26 |  | 5A | AP25 | Central airbag and pretensioner unit |
| F27 |  | 10A | AP40 | Instrument panel - Headlight adjustment control - Discharge lamp control unit - Left-hand heater jet - Voice synthesis control unit |
| F28 | STOP | 20A | AP10 | Electric window control - Mobile telephone central unit - Diagnostic socket - Cruise control / speed limiter control - Brake light switch - Wash / wipe combination switch - Brake light illumination relay - Child safety control - Shift pattern control - Gear lever display - Electric door mirror control |

Fuses and Relays

Location

The consumer cut-out fuse is located in the central console, under the covering of the storage armrest.

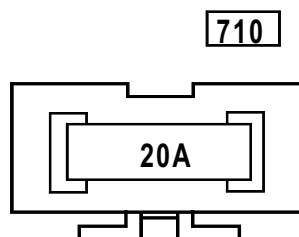

SE2051


| No. | Amps | Description |
|-----|------|---|
| F50 | 20A | Consumer cut-out fuse: Diagnostic socket (225) - Radio (261) Analogue or digital clock (R107) – Tyre pressure information computer (1323) - Alarm connection (R325) – Multifunction display (653) – Mobile telephone unit (492) – Navigation aid computer (662) – CD changer (1272) – Multimedia multiplex connection keypad (1657) – Video display (1127) – Mobile telephone handset (R251) – Video control unit (1273) – Retractable video screen unit (1303) – Engine fuse box and relay (597) |

Fuses and Relays

PASSENGER COMPARTMENT RELAY AND FUSE BOX (1619)

Location

This fuse box is located in the passenger compartment, behind the glove compartment.

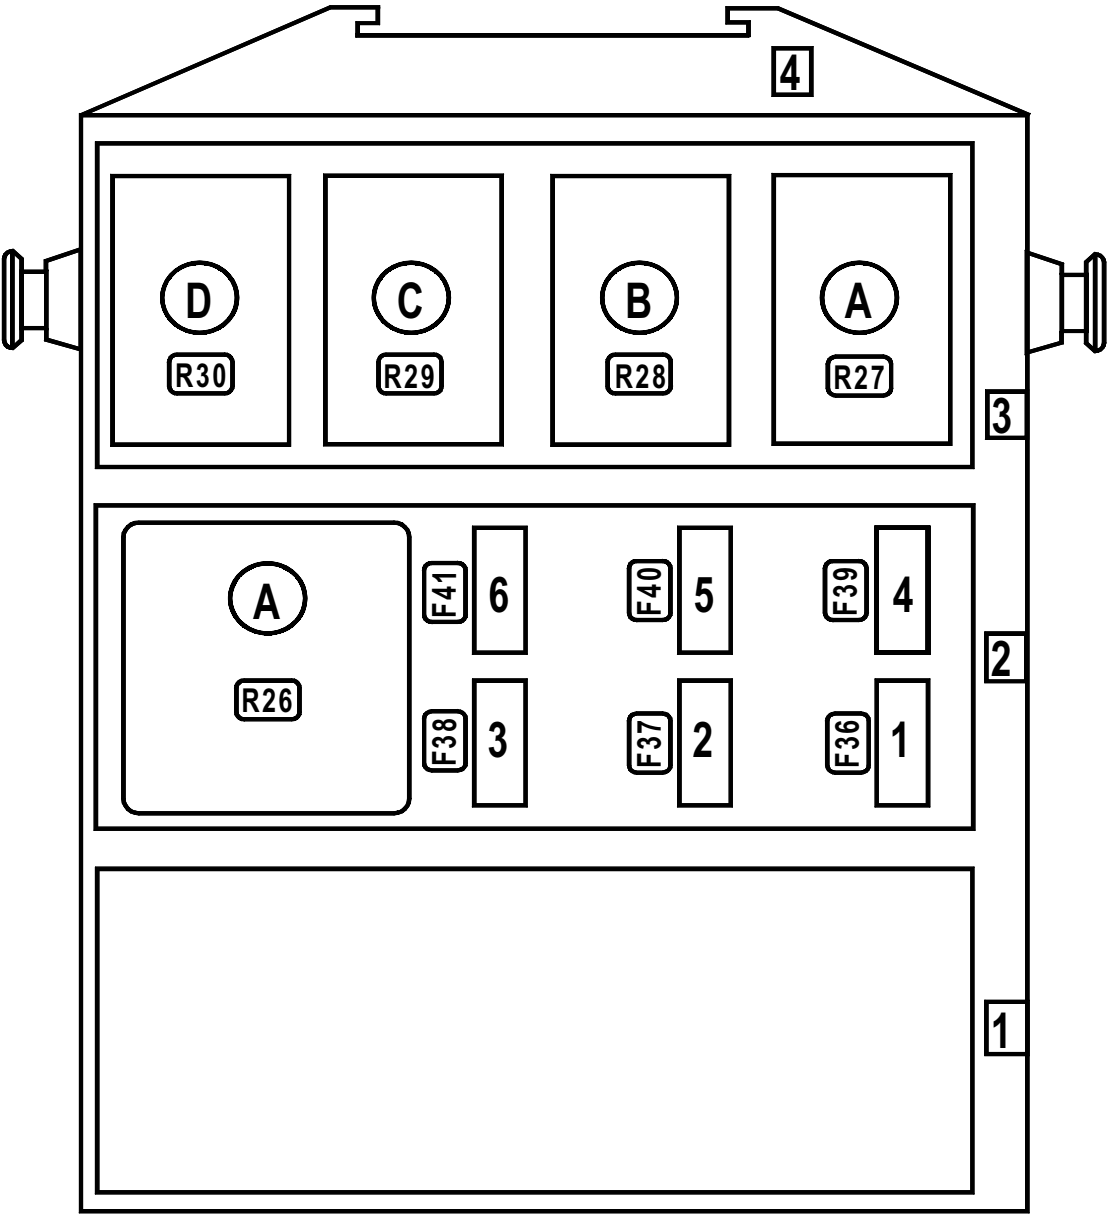

SE2322

Fuses and Relays

Allocation of fuses and relays (according to equipment level)

Relay and fuse board 1619 (row 2)

| No. | Amps | Connection | Description |
|--------------------------|------|------------|--|
| 1 (F36) | 20A | 38MU | Fuse: heated seats (385-386) |
| 2 (F37) | 10A | 38MT | Fuse: passenger compartment blower unit 2 control unit (1159) |
| 3 (F38) | 20A | BP24 | Fuse: seat memory central unit supply (515) seat memory and control keypad (517) |
| 4 (F39) | -- | -- | Not in use |
| 5 (F40) | 30A | SP11 | Fuse: driver's electric seat (1406) |
| 6 (F41) | 30A | SP10 | Fuse: passenger electric seat (1407) |
| A (R26) | -- | -- | Relay: seat supply (1399) |

Allocation of fuses and relays (according to equipment level)

Relay board 1619 (row 3)


| No. | Description |
|--------------------------|---|
| A (R27) | Relay: air conditioning (Engine running: 1615) |
| B (R28) | Relay: heated seats (Engine running 2: 1616) |
| C (R29) | Relay: ESP (1524) |
| D (R30) | Relay: headlight washers pump (753) |

Fuses and Relays

PASSENGER COMPARTMENT RELAY AND FUSE BOX (1531)

Location

This fuse box is located in the passenger compartment on the UCH.

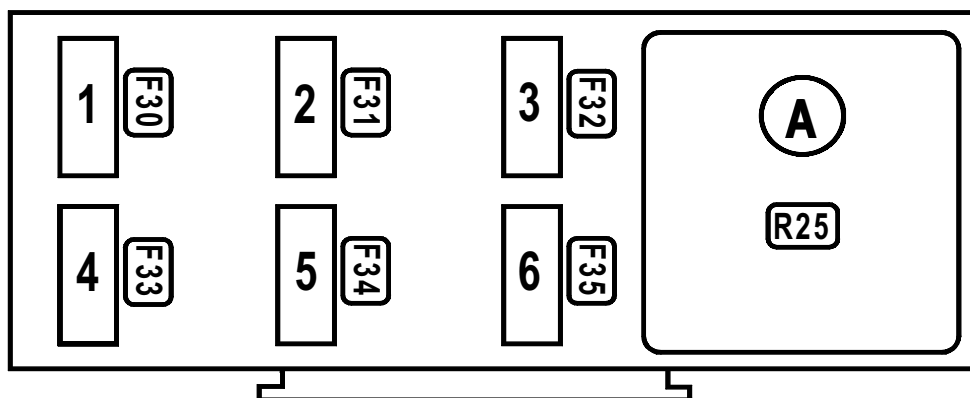

SE2323

Allocation of fuses and relays (according to equipment level)

Fuse and relay board 1531AA


| No. | Amps | Connection | Description |
|------------|------|------------|---|
| 1 (F30) | -- | -- | Not in use |
| 2 (F31) | 30A | ABP3 | Fuse: sunroof (304) |
| 3 (F32) | -- | -- | Not in use |
| 4 (F33) | 10A | 13AR | Fuse: rear right and left-hand footwell lights (1120 - 1121) |
| 5 (F34) | -- | -- | Not in use |
| 6 (F35) | -- | -- | Not in use |
| A (R25) | -- | -- | Relay: electric window (703) |

Fuses and Relays

PASSENGER COMPARTMENT RELAY AND FUSE BOX (260)

Location

This fuse box is located in the passenger compartment on the driver's side.

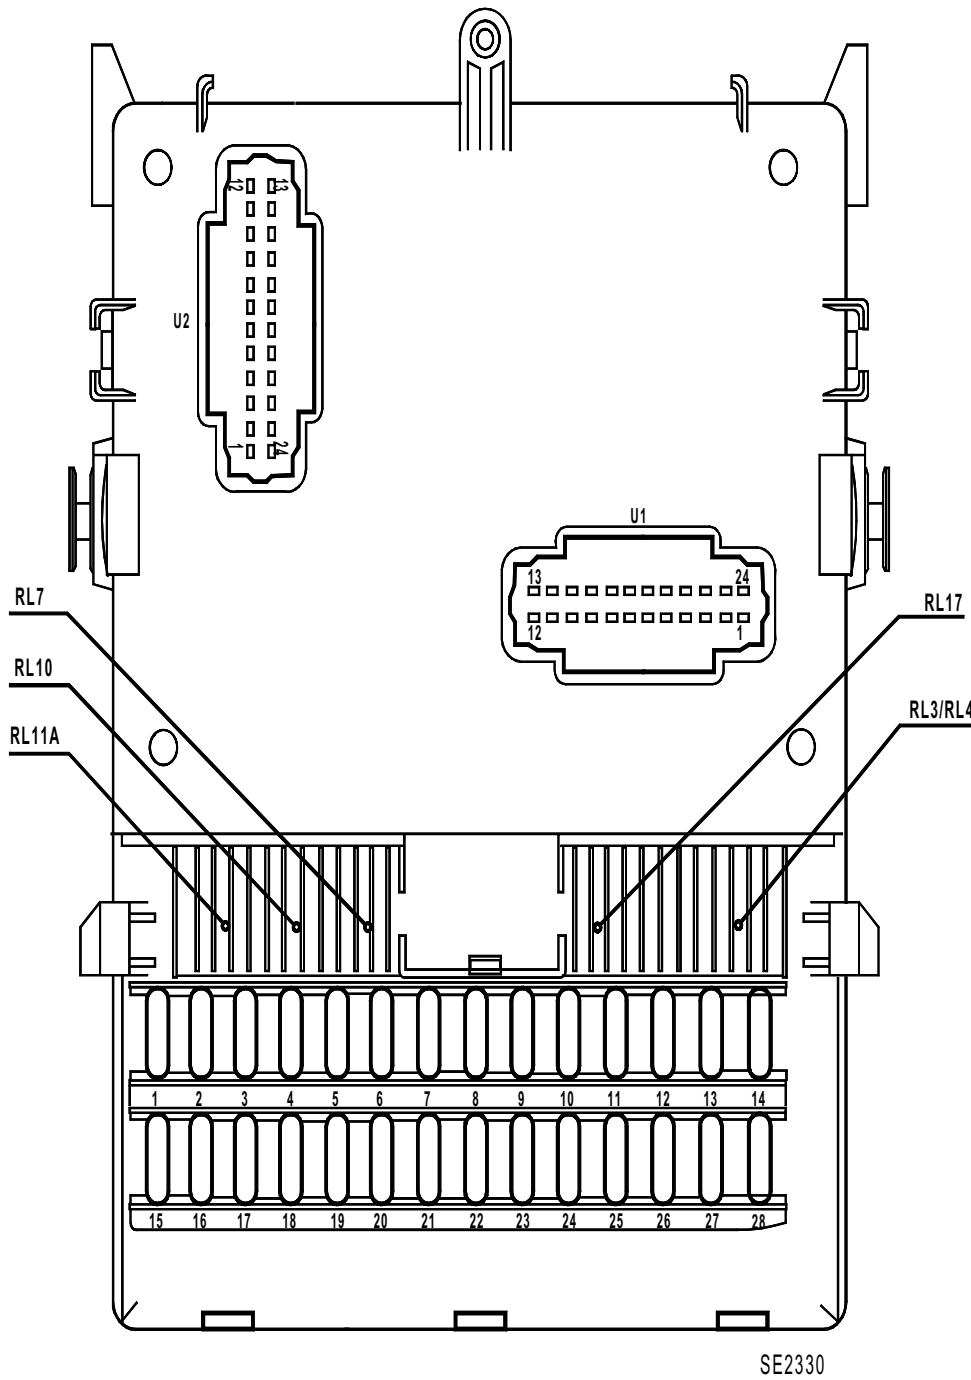

Fuses and Relays

Allocation (according to equipment level)

U1 (24-track connector)

| Track | Description |
|-------|--|
| 1 | Electric door locking output (fuel filler flap, rear interior and all exterior) |
| 2 | Electric door locking relay output (rear interior) |
| 3 | Fuel filler flap electric locking relay output |
| 4 | Reserved |
| 5 | Electric door locking relay output (front interior and driver's exterior) |
| 6 | Electric door locking relay output (rear interior, rear exterior and passenger exterior) |
| 7 | Timed feed relay output |
| 8 | + after ignition feed relay output |
| 9 | Reserved |
| 10 | Electric door locking relay output (fuel filler flap and exterior all) |
| 11 | Relayed idle + after ignition feed |
| 12 | Reserved |
| 13 | Reserved |
| 14 | Side lights relay output |
| 15 | Relayed idle + after ignition feed input |
| 16 | Main beam headlights relay output |
| 17 | Rear wiper relay output |
| 18 | Reserved |
| 19 | Windscreen wiper high and low speed selection relay output |
| 20 | Accessories relay output 1 |
| 21 | Starter relay output |
| 22 | Electric door locking relay output (front interior) |
| 23 | Power earth |
| 24 | Electric door locking output (fuel filler flap, driver's exterior and all interior) |

Fuses and Relays

U2 (24-track connector)


| Track | Description |
|-------|--|
| 1 | Brake light fuse failure input |
| 2 | Accessories relay output 2 |
| 3 | Right-hand brake light shunt input |
| 4 | Rear right-hand side light shunt input |
| 5 | Right-hand dipped headlights relay output |
| 6 | Left-hand dipped headlights relay output |
| 7 | Front foglights relay output |
| 8 | Right-hand side light fuse failure input |
| 9 | Left-hand side light fuse failure input |
| 10 | Front right-hand side light shunt input |
| 11 | Windscreen wiper start/stop selection relay output |
| 12 | Power earth |
| 13 | Electronic earth |
| 14 | Reserved |
| 15 | Rear left-hand side light shunt input |
| 16 | Front left-hand side light shunt input |
| 17 | Licence plate lighting shunt input |
| 18 | Left-hand brake light shunt input |
| 19 | Rear foglights relay output |
| 20 | Brake switch input |
| 21 | Indicators supply input |
| 22 | Right-hand indicator control output |
| 23 | Left-hand indicator control output |
| 24 | UCH supply input |

Fuses and Relays

PASSENGER COMPARTMENT RELAY AND FUSE BOX (260)

location

This fuse box is located in the passenger compartment on the driver's side.

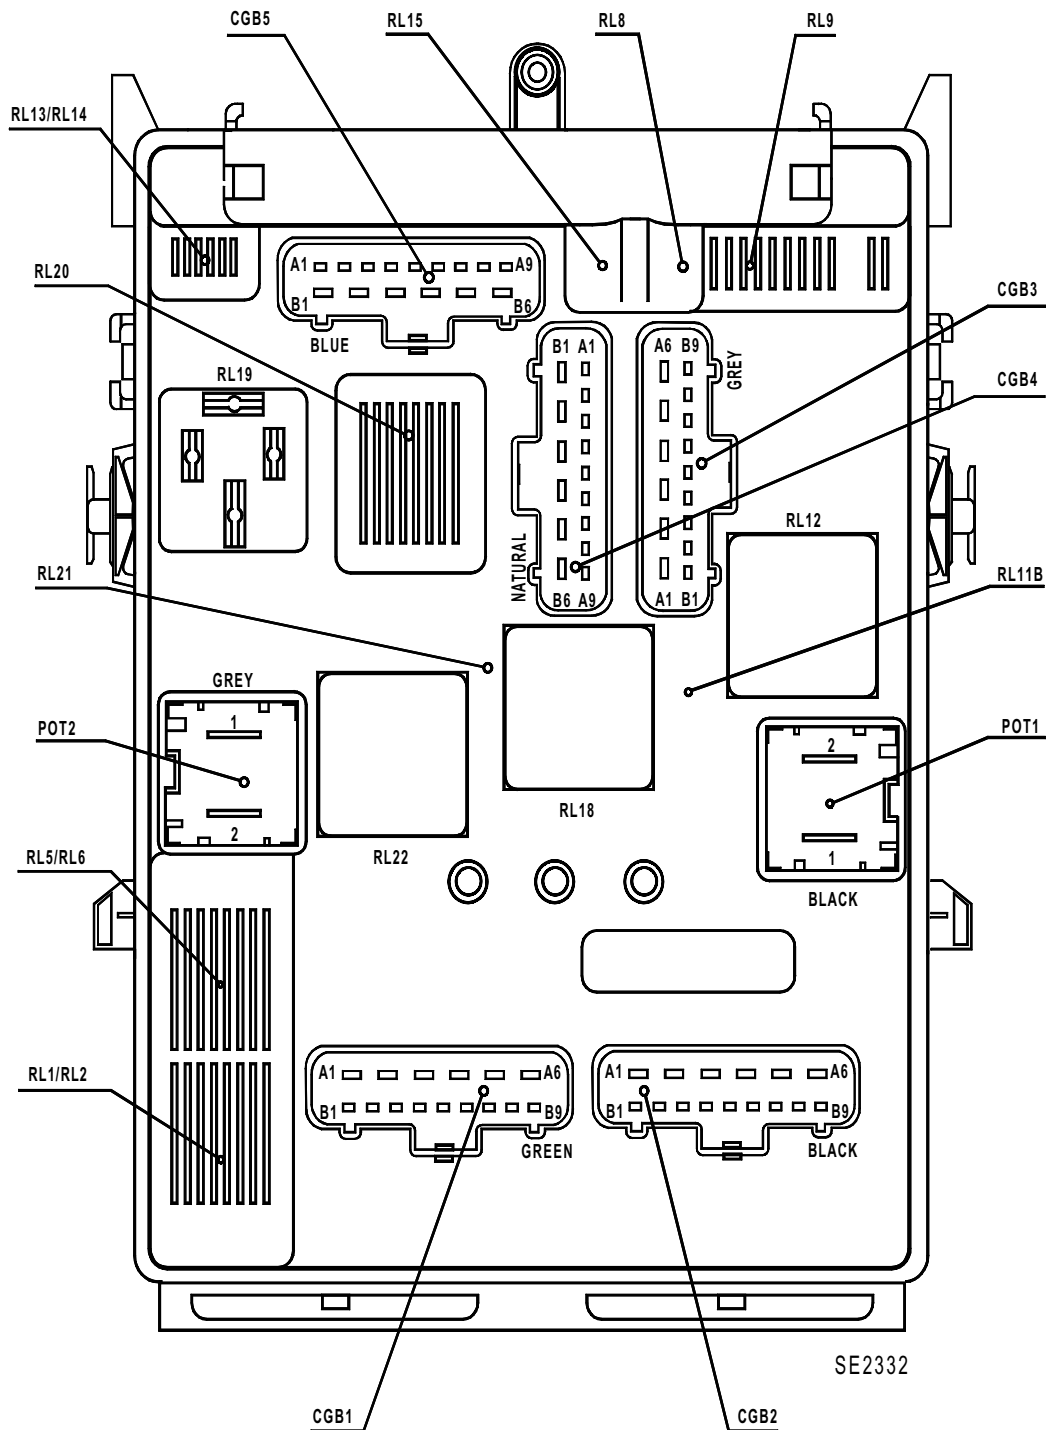

Fuses and Relays

Allocation (according to equipment level)

CGB1 (15-track connector) **GREEN**

| WHITE | | |
|-------|------------|---|
| Track | Connection | Description |
| A1 | SBP3 | Passenger/driver's electric window battery protected + accessories feed (204) |
| A2 | SBP2 | Rear left-hand and right-hand electric window motor (201-202-1169) |
| A3 | AP10 | Brake lights protected + after ignition fuse (131-130-133-492-225-1081-160-129-145-1169-1170-1171-1172-134-135) |
| A4 | BP48 | Door mirrors and driver's electric window protected + battery feed (203-1122) |
| A5 | 20D | Driver's door central locking (140) |
| A6 | SP4 | First row accessories socket (506) |
| BLACK | | |
| B1 | 20AP | Passenger/driver's door central locking (140-141) |
| B2 | BP68 | Transceiver unit protected + battery feed fuse (1082-1087-1216) |
| B3 | 20AN | Driver's/passenger's door central locking (140-141) |
| B4 | AP5 | Anti-lock braking system protected + fuse (583-1094) |
| B5 | AP25 | Airbag protected + after ignition feed (756) |
| B6 | 20AL | Rear-door locking control (138-139) |
| B7 | SP2 | Protected + accessories feed (261-1273-703-1399-1125-515) |
| B8 | BP3 | Central door locking protected + battery feed (123) |
| B9 | BP32 | Protected + battery feed (597) |

CGB2 (15-track connector) **BLACK**

| WHITE | | |
|-------|------------|--|
| Track | Connection | Description |
| A1 | SP7 | Protected + accessories feed (101-1615) |
| A2 | -- | Not in use |
| A3 | BP47 | Protected + battery feed / trailer |
| A4 | LPG | Side lights + lighting (101-168-1216-241-247-261-419-213-562-1440-1081-1106-1125-506-1468-1469-1284-1285-1335-1336-1320) |
| A5 | BPA2 | Stalk 2 protected + battery feed (209) |
| A6 | AP3 | Heated rear screen control protected + after ignition fuse (123-1415-443-419-212-1222-120) |
| BLACK | | |
| B1 | AP40 | Accessories protected + after ignition fuse (247-562-989-694-363) |
| B2 | 63L | Rear right-hand side light + control feed (172) |
| B3 | BPA4 | Horn protected + battery (209) |
| B4 | BPA3 | Stalk 1 protected + battery (209) |
| B5 | 40P | Door mirror de-icing fuse protected + control feed (239-240) |
| B6 | CPD | + right-hand dipped headlight feed (226) |
| B7 | 9P | Rear fog lights protected + control feed (1284-1285-247) |
| B8 | 63M | Front right-hand side light + control feed (226) |
| B9 | CPG | Left-hand dipped headlight + feed (227-247) |

Fuses and Relays

Allocation (according to equipment level)

CGB3 (15-track connector) **GREY**

| WHITE | | |
|-------|------------|---|
| Track | Connection | Description |
| A1 | 64C | Left-hand indicators control (226) |
| A2 | 15B | Rear screen de-icer + control (200) |
| A3 | 20C | Electric door locking opening + control (140) |
| A4 | MB | Passenger compartment fuse box and relay common earth (MB) |
| A5 | 8B | Front fog lights + feed (176-177-247) |
| A6 | 36A | Rear wiper + control feed (211) |
| BLACK | | |
| B1 | 15M | Heated rear screen relay - control (419) |
| B2 | AP10 | Brake lights protected + after ignition fuse (131-130-133-492-225-1081-160-129-145-1169-1170-1171-1172-134-135) |
| B3 | BPT3 | Protected + battery / timed relay (1184) |
| B4 | -- | Not in use |
| B5 | SP13 | Protected + accessories feed (160) |
| B6 | 65B | Right-hand brake light + control feed (172) |
| B7 | 65A | Brake lights control (160) |
| B8 | 65C | Left-hand brake light + control feed (173) |
| B9 | 63N | Front left-hand side light feed + control feed (166) |

CGB4 (15-track connector) **WHITE**

| WHITE | | |
|-------|------------|---|
| Track | Connection | Description |
| A1 | -- | Not in use |
| A2 | 13U | Rear left-hand door light (526) |
| A3 | NAP | Tunnel electronic earth |
| A4 | 63Q | Lighting + control feed (227) |
| A5 | -- | Not in use |
| A6 | 64D | Brake lights control (226) |
| A7 | -- | Not in use |
| A8 | 13W | Interior lighting + control feed (134-213-1165-692) |
| A9 | -- | Not in use |
| BLACK | | |
| B1 | 11A | Main beam headlight + control (226-247) |
| B2 | BP1 | Protected + battery feed input (597) |
| B3 | BP1 | Protected + battery feed input (597) |
| B4 | D | + starter feed (163-779-120) |
| B5 | -- | Not in use |
| B6 | A | + after ignition feed (597) |

Fuses and Relays

Allocation (according to equipment level)

CGB5 (12-track connector) **BLUE**

| WHITE | | |
|-------|------------|---|
| Track | Connection | Description |
| A1 | 13W | Interior lighting + control feed (134-213-1165-692) |
| A2 | 13AG | Luggage compartment light (509-1656) |
| A3 | -- | Not in use |
| A4 | 13V | Passenger's door light timer + control feed (524) |
| A5 | 13X | Driver's door light timer + control feed (523) |
| A6 | 13T | Right rear door light timer + control feed (525) |
| A7 | 63K | Rear left-hand side light feed + control feed (173) |
| A8 | 23E | Rear locking function relay coil control (135) |
| A9 | 23EA | Rear window lift relay control (1531) |
| BLACK | | |
| B1 | 13AQ | Footwell lights (1118-1120-1121) |
| B2 | 20BR | Bonnet and fuel filler flap opening control (844) |
| B3 | SP3 | Protected + accessories feed (1023) |
| B4 | -- | Not in use |
| B5 | BP3A | Protected + battery (247-363-419-515-1151) |
| B6 | MB | Common earth relay and fuse box (MB) |


Fuses and Relays

PASSENGER COMPARTMENT RELAY AND FUSE BOX (260)

location

This fuse box is located in the passenger compartment on the driver's side.

Front face:

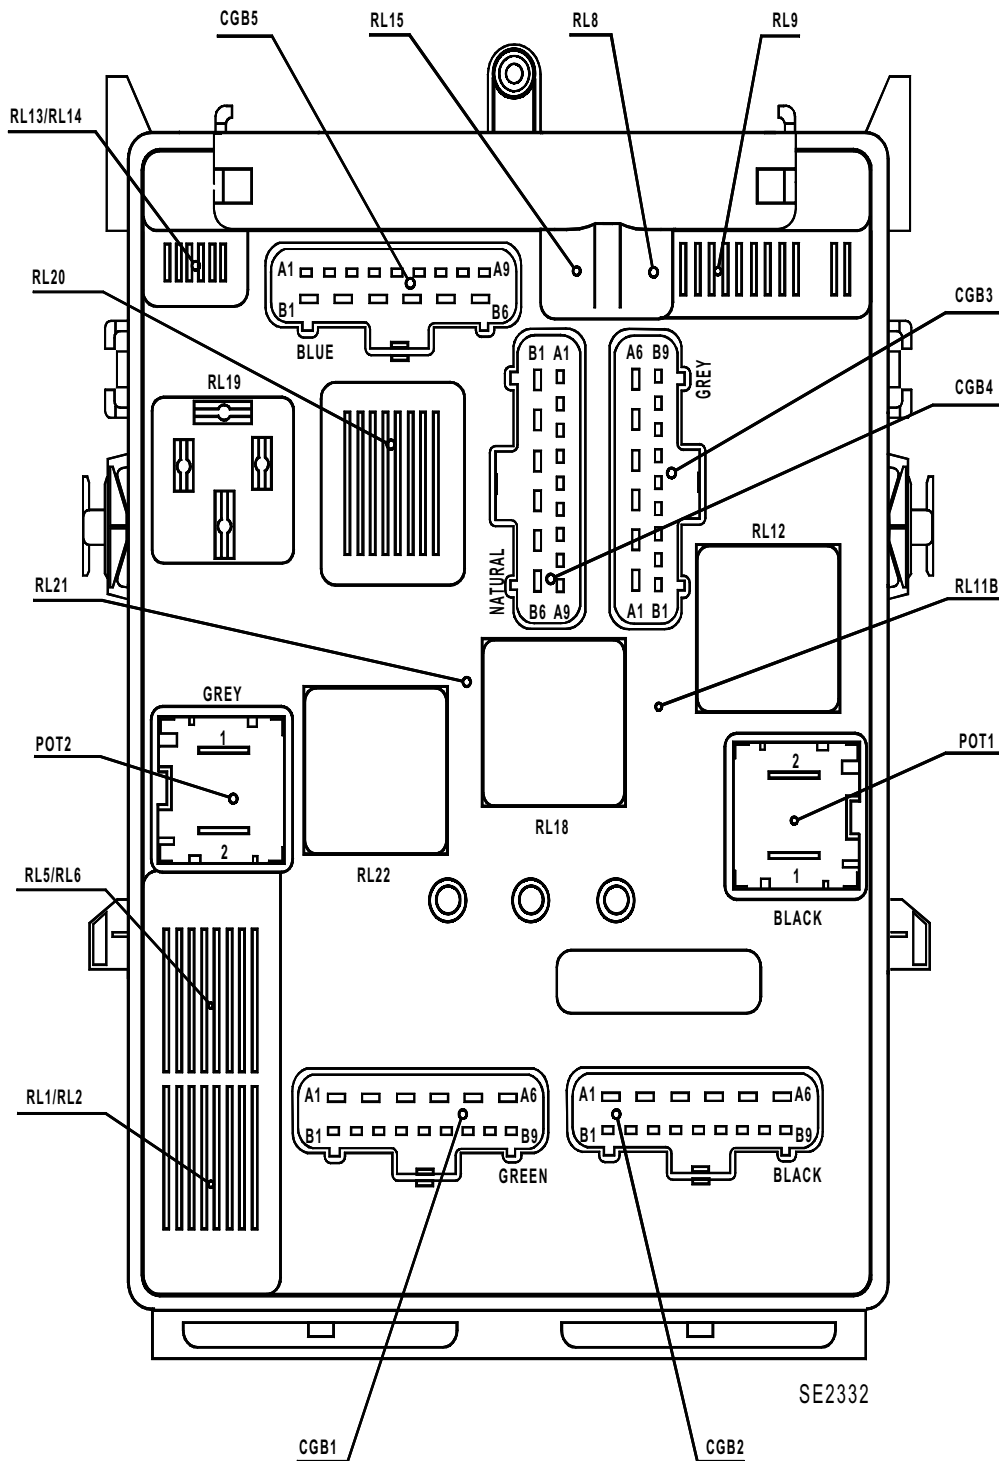


Fuses and Relays

PASSENGER COMPARTMENT RELAY AND FUSE BOX (260)

location

This fuse box is located in the passenger compartment on the driver's side.

Rear face:

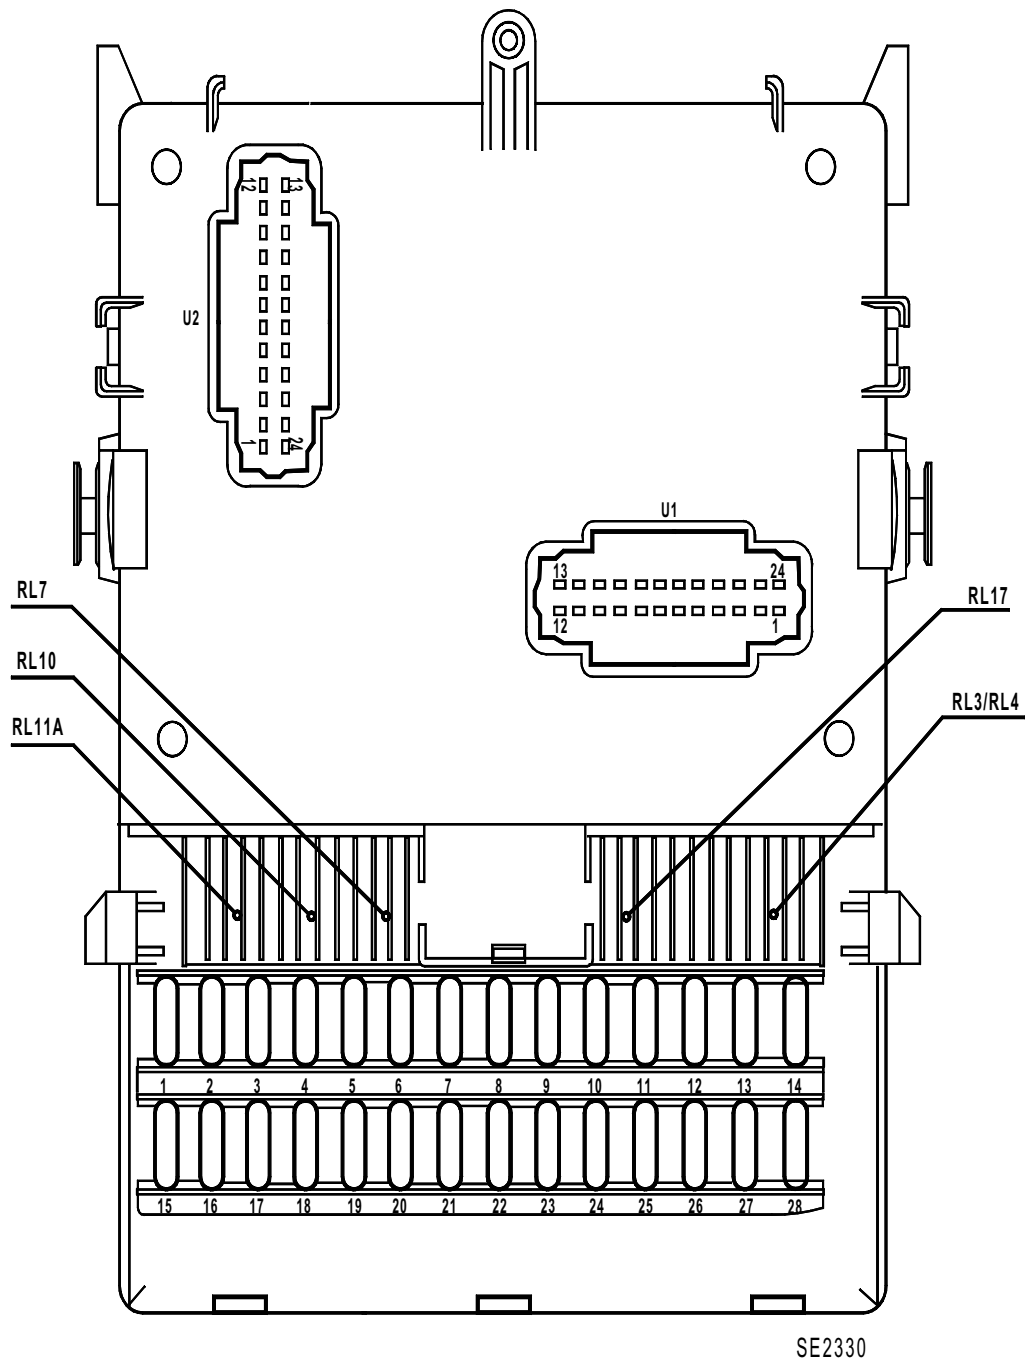

Fuses and Relays

Allocation (according to equipment level)

| Track | Description |
|-----------|--|
| RL1/RL2 | Relay: central door locking (1042) (internal 260) |
| RL3/RL4 | Relay: central door locking (1018) (internal 260) |
| RL5/RL6 | Relay: central door locking (1043) (internal 260) |
| RL7 | Relay: running lights / side lights (467) (internal 260) |
| RL8 | Relay: headlights (1574) (internal 260) |
| RL9 | Relay: front foglights (231) (internal 260) |
| RL10 | Relay: rear foglights (230) (internal 260) |
| RL11A | Relay: left-hand dipped beam headlight (290) (internal 260) |
| RL11B | Relay: right-hand dipped beam headlight (290) (internal 260) |
| RL12 | Relay: rear screen de-icer (235) |
| RL13/RL14 | Relay: front wiper (1040 / 315) (internal 260) |
| RL15 | Relay: rear wiper (1041) (internal 260) |
| RL16 | Relay: timer (808) (internal 260) |
| RL17 | Relay: timer (808) (internal 260) |
| RL18 | Relay: accessories feed 2 (1389) |
| RL19 | Relay: accessories feed 1 (1155) |
| RL20 | Relay: starter (232) (internal 260) |
| RL21 | Relay: after ignition idle (751) (internal 260) |
| RL22 | Relay: after ignition (640) |

POT 1 (2-track connector) **BLACK**

| Track | Connection | Description |
|----------|------------|--|
| A | BP11 | + battery feed protected by passenger compartment fuse 1 (597) |
| B | BP15 | Rear heated screen protected + battery feed (597) |

POT 2 (2-track connector) **GREY**


| Track | Connection | Description |
|----------|------------|--|
| A | BP13 | + battery feed protected by passenger compartment fuse 3 (597) |
| B | BP12 | + battery feed protected by passenger compartment fuse 2 (597) |

Fuses and Relays

UCH (645)

location

This fuse box is located in the passenger compartment on the driver's side.

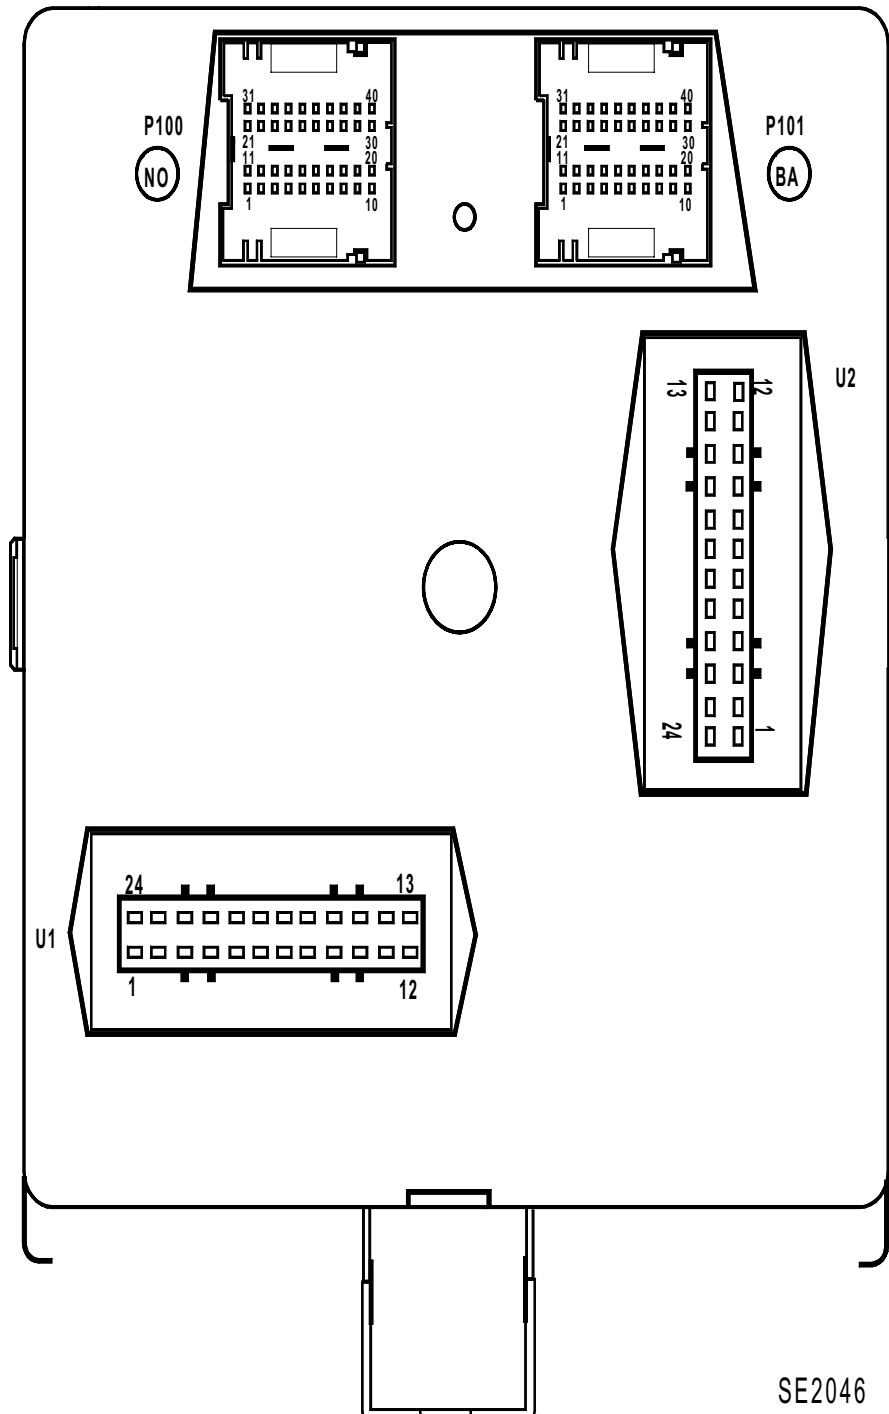

Fuses and Relays

Allocation (according to equipment level)

P100 (40-track connector) **BLACK**

| BROWN | | |
|--------------|-------------------|--|
| Track | Connection | Description |
| 1 | 26G | Card fully inserted + signal (1082) |
| 2 | 64Q | Central timed flasher control (125) |
| 3 | 26M | Engine running indicator light control (1087) |
| 4 | 23E | Rear electric window function locking relay coil control (123-135) |
| 5 | 14H | Windscreen wiper high speed control (145) |
| 6 | 26C | Card reader DATA transmission (1082) |
| 7 | 26Z | Manual gearbox neutral + signal feed (1109) |
| 8 | H66P | Reversing lights + control feed (1109) |
| 9 | 20A | Central door locking closing timer + feed control (123) |
| 10 | 14D | Windscreen wipers timed low speed control (145) |
| 11 | 26L | OK to start light control (1087) |
| 12 | -- | Not in use |
| 13 | HK7 | Diagnostic K signal (225) |
| 14 | 47X | External temperature display output signal (653) |
| 15 | 14G | Windscreen wiper low speed control (145) |
| 16 | 18A | Boot lighting control (509) |
| 17 | 20B | Central door locking opening timer + control feed (123) |
| 18 | 70B | Tyre deflation radio frequency transmission signal (1323) |
| 19 | 26D | UCH DATA transmission (1082) |
| 20 | 26N | Engine Start/Stop button + signal feed (1087) |
| GREEN | | |
| Track | Connection | Description |
| 21 | 20M | Door locking LED (123-427) |
| 22 | 21K | Sunroof electric windows anti-pinch serial line signal (201-202-203-204-304) |
| 23 | 14S | Rain sensor serial line signal (1415) |
| 24 | 36E | Rear wiper timer + control feed (145) |
| 25 | 24A | Rear screen washer pump + control (145) |
| 26 | 26X | Clutch - signal (675) |
| 27 | -- | Not in use |
| 28 | 26T | Driver's handle infrared sensor signal (1084) |
| 29 | 26R | Rear right-hand handle infrared sensor signal (1085) |
| 30 | 5GU | Automatic gearbox display CAN H signal (1129) |
| 31 | 13AE | Interior lighting - control feed (260) |
| 32 | 11Q | Main beam headlights monolever control / UCH (209) |
| 33 | 26Q | Passenger handle infrared sensor signal (1083) |
| 34 | -- | Not in use |
| 35 | 16A | Windscreen washer pump + feed control (145) |
| 36 | 64S | Right-hand indicator timer operating control (209) |
| 37 | 64T | Left-hand indicator timer operating control (209) |
| 38 | 36C | Rear wiper park position switch - signal (211) |
| 39 | 11R | Headlight flash stalk control / UCH (209) |
| 40 | 5GV | Automatic gearbox display CAN L signal (1129) |

Fuses and Relays

Allocation (according to equipment level)


P101 (40-track connector) **WHITE**

| BROWN | | |
|--------------|------------|--|
| Track | Connection | Description |
| 1 | 133C | CAN L signal (225) |
| 2 | 109E | Variable power assisted steering motor D control (540) |
| 3 | 109D | Variable power assisted steering motor C control (540) |
| 4 | 20V | Rear right-hand door deadlocking - signal (138) |
| 5 | 26P | Door handle infrared + sensor (1083-1084-1085) |
| 6 | C | Dipped headlights + feed (209) |
| 7 | 87B | Rear right-hand first notch switch - signal (138-525) |
| 8 | 20S | Boot opening motor authorised supply (1322) |
| 9 | 26I | Electric steering column lock + (1088) |
| 10 | 26J | Safety Hall sensor - control |
| 11 | 133B | CAN H signal (225) |
| 12 | 26B | Card presence + signal (1082-1088) |
| 13 | 109B | Variable power assisted steering motor phase B control (540) |
| 14 | 80T | Software lock - control (247) |
| 15 | 87A | Rear left-hand first notch switch - signal (139-526) |
| 16 | 87H | Driver's first notch switch - signal (523) |
| 17 | -- | Reserved |
| 18 | 109A | Variable power assisted steering motor phase A control (540) |
| 19 | -- | Reserved |
| 20 | 87G | Passenger first notch switch - signal (141-524) |
| GREEN | | |
| Track | Connection | Description |
| 21 | 20U | Rear left-hand door deadlocking - signal (139) |
| 22 | 67A | Horn + control feed (1184) |
| 23 | 26S | Rear left-hand handle infrared sensor signal (1086) |
| 24 | 20T | Child safety LED - control (135) |
| 25 | 20AB | Tailgate lock signal (1151) |
| 26 | 5A | Brake pedal switch + signal feed |
| 27 | -- | Not in use |
| 28 | 8H | Front fog lamps + control > UCH |
| 29 | L | Side lights + |
| 30 | 20G | Tailgate motor opening control |
| 31 | 9B | Rear fog lamps + control |
| 32 | 88CG | Seat memory serial line control and passenger door MUX computer (515-1123) |
| 33 | -- | Not in use |
| 34 | H81 | Tailgate lock relay - control (1151) |
| 35 | -- | Not in use |
| 36 | 88BH | Memory control (515-1123) |
| 37 | -- | Not in use |
| 38 | 64F | Hazard warning lights indicator light + control |
| 39 | -- | Not in use |
| 40 | 39B | Headlight washer coil - control (219-753) |

Fuses and Relays

ENGINE AND RELAY FUSE BOX (597)

Fuse and relay box (engine side)

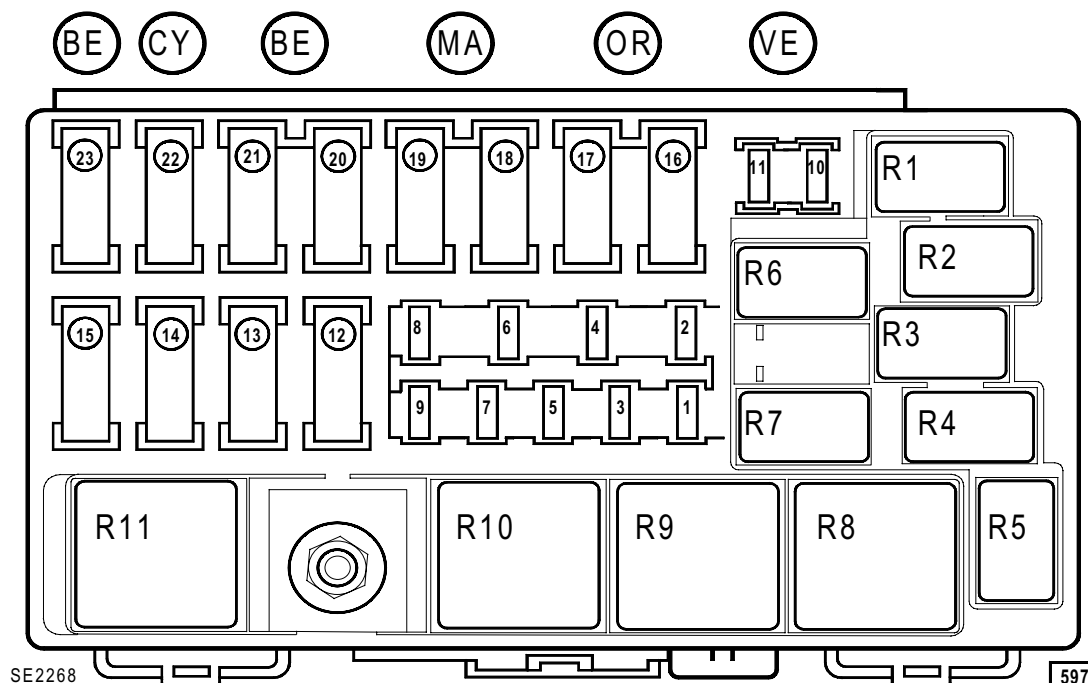


Allocation of fuses (depending on equipment level)

| No. | Amps | Connection | Description |
|------|----------|------------|---|
| FM1 | 7.5A/15A | BP42 | Fuse: automatic gearbox (119) BVA5 (SU1): 7.5A - BVA6 (SU4): 15A |
| FM2 | -- | -- | Not in use |
| FM3 | 30A | BP37 | Fuse: injection relay (238 - 236 - 983) |
| FM4 | 5A/15A | AP4 | Fuse: automatic gearbox (119) BVA5 (SU1): 15A - BVA6 (SU4): 5A |
| FM5 | 30A | BP27 | Fuse: auxiliary heater (1275) - Diesel heater relay (450) - vacuum pump relay (1566) |
| FM6 | 10A | AP29 | Fuse: injection computer (120) - Diesel heater relay control (450) - fuel pump relay (236) |
| FM7 | -- | -- | Not in use |
| FM8 | -- | -- | Not in use |
| FM9 | 20A | BP7 | Fuse: air conditioning clutch (171) and variable capacity cylinder actuator (1150) |
| FM10 | 20A | BP14 | Fuse: ABS/ESP computer (1094) |
| FM11 | 20A | BP32 | Fuse: multifunction horn (1184) |
| FM12 | 70A | BP35 | Fuse: diesel preheating (257) |
| FM13 | 70A | BP91 | Fuse: thermoplungers (1072-1073) via relay R11 (1068) |
| FM14 | 70A | BP9 | Fuse: thermoplunger (898) via relay R1 (1067) and thermoplunger (1074) via relay R5 (1069) |
| FM15 | 60A | BP71 | Fuse: low and high speed fan unit (700-234) |
| FM16 | 40A | BP15 | Fuse: headlight washers - De-icing relay (260-1619) |
| FM17 | 40A | BP8 | Fuse: ABS/ESP computer (1094) and ABS vacuum (R326) |
| FM18 | 70A | BP11 | Fuse: passenger compartment no. 1 (260) |
| FM19 | 70A | BP1 | Fuse: passenger compartment (260-1619) |
| FM20 | 60A | BP13 | Fuse: passenger compartment no. 3 (260) |
| FM21 | 60A | BP12 | Fuse: consumer cut-off fuse feed (260-1619-710) passenger compartment No. 2 |
| FM22 | -- | -- | Not in use |
| FM23 | 60A | BP2 | Fuse: windscreen wiper and electric parking brake |

Fuses and Relays

ENGINE FUSE AND RELAY BOX 597 (ENGINE SIDE)

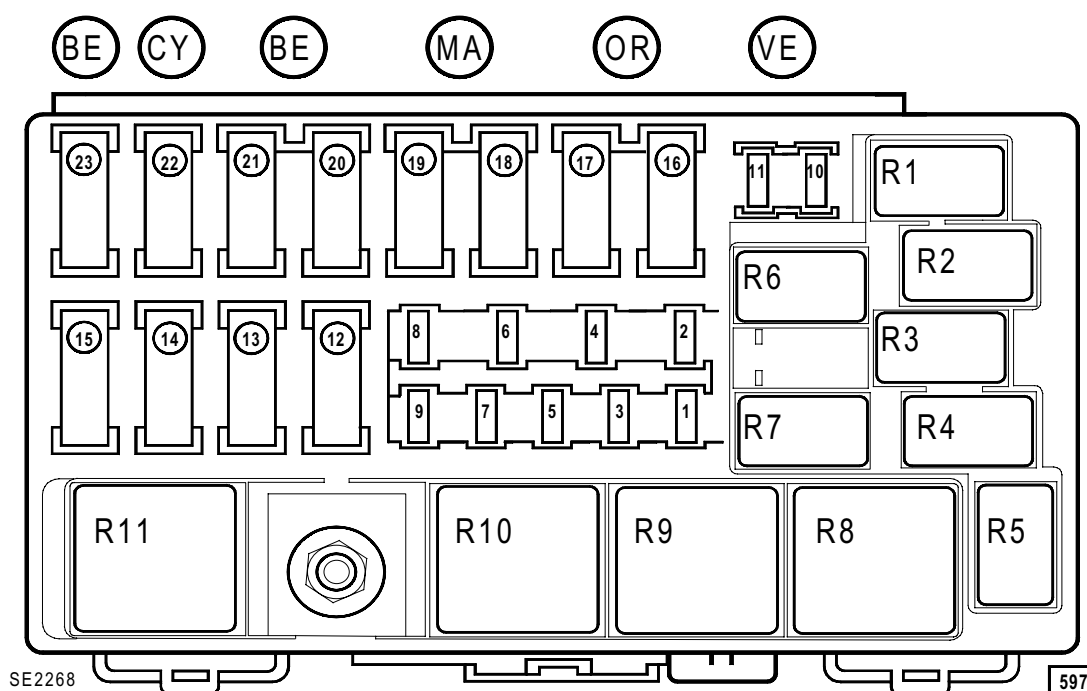

Allocation of relays (depending on equipment level)

F4RT engine


| No. | Description |
|-----|---|
| R1 | Relay: auxiliary heater 1 (1067) |
| R2 | Not in use |
| R3 | Relay: low-speed fan unit (700) |
| R4 | Relay: vacuum pump (1566) |
| R5 | Not in use |
| R6 | Relay: fuel pump (236) |
| R7 | Not in use |
| R8 | Relay: injection locking (238) |
| R9 | Not in use |
| R10 | Relay: fan unit (234) |
| R11 | Relay: auxiliary heater 3 (1069) |

V4Y engine

| No. | Description |
|-----|---|
| R1 | Not in use |
| R2 | Relay: fan unit (234) |
| R3 | Not in use |
| R4 | Not in use |
| R5 | Not in use |
| R6 | Relay: fuel pump (236) |
| R7 | Relay: throttle motor safety (1315) |
| R8 | Relay: injection computer supply (983) |
| R9 | Relay: low-speed fan unit (700) |
| R10 | Relay: fan unit (234) |
| R11 | Not in use |

Fuses and Relays

ENGINE FUSE AND RELAYS BOX (597) (ENGINE SIDE)

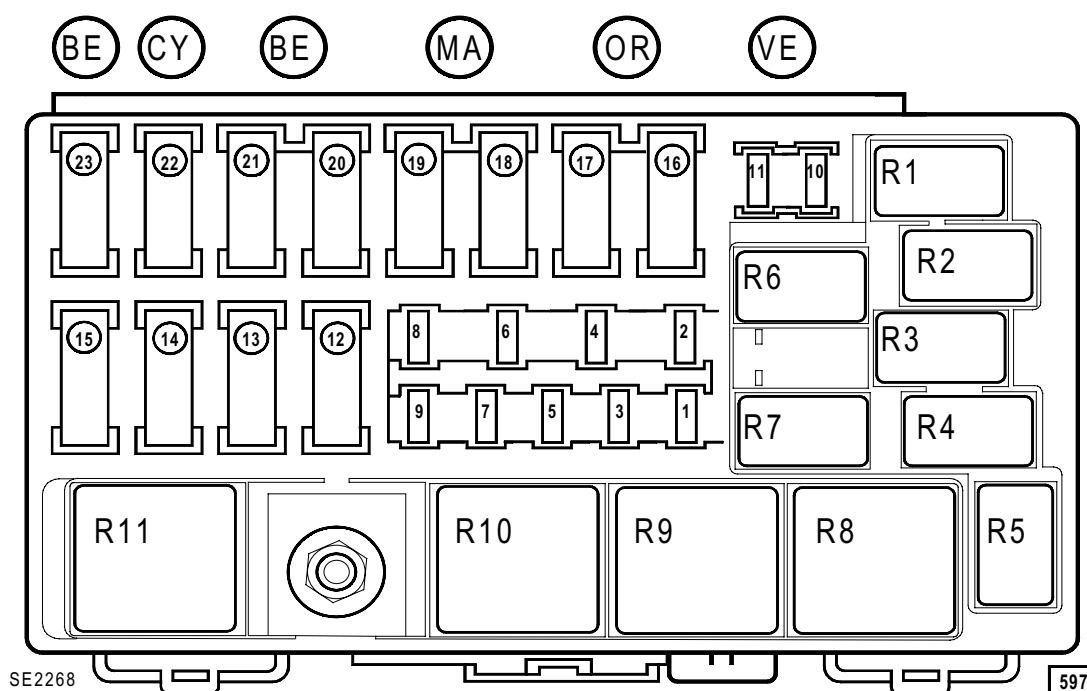

Allocation of relays (depending on equipment level)

G9T engines

| No. | Description |
|-----|---|
| R1 | Relay: auxiliary heater 1 (1067) |
| R2 | Not in use |
| R3 | Not in use |
| R4 | Not in use |
| R5 | Relay: auxiliary heater 3 (1069) |
| R6 | Not in use |
| R7 | Relay: diesel heater (450) |
| R8 | Relay: injection computer supply (983) |
| R9 | Relay: low speed fan unit (700) |
| R10 | Relay: fan unit (234) |
| R11 | Relay: auxiliary heater 2 (1068) |

P9X engine

| No. | Description |
|-----|---|
| R1 | Relay: auxiliary heater 1 (1067) |
| R2 | Relay: fan unit (234) |
| R3 | Not in use |
| R4 | Not in use |
| R5 | Relay: auxiliary heater 3 (1069) |
| R6 | Not in use |
| R7 | Relay: diesel heater (450) |
| R8 | Relay: injection locking (238) |
| R9 | Relay: low speed fan unit (700) |
| R10 | Relay: fan unit (234) |
| R11 | Relay: auxiliary heater 2 (1068) |